

# Current Output Sensor Cable for 4-20 mA (0-20 mA) Output SCC1-Current

- Configurable analog current output of flow rate measurement
- Switch output with configurable threshold
- Volume integration by counting pulses
- Compatible with digital SLQ, SLI, SLS and SLG liquid flow meters



#### **Product Summary**

The Current Sensor Cable SCC1-Current allows simple and quick readout of Sensirion's liquid flow meters by converting the digital sensor reading into an analog current (current loop) output, configurable to any range within 0-20 mA. Additionally, a digital (high/low) open drain output with two modes of operation is available (Flow Switch / Volume Counter).

In *Flow Switch* mode, the output is high or low depending on the momentary flow rate and two configurable threshold values.

In *Volume Counter* mode, a voltage pulse is generated every time a defined volume has flown through the flow meter.



## Content

1 Modes of Operation	3
2 Electrical Specifications	7
3 Mechanical Specifications	10
4 Ordering Information	10
5 Important Notices	11
6 Revision History	12
7 Headquarters and Subsidiaries	12



#### 1 Modes of Operation

The SCC1-Current sensor cable provides analog 0-20 mA (or 4-20 mA) output for Sensirion's Liquid Flow meters of the SLG, SLI, SLS and digital SLQ series. The cable's internal electronics read the I<sup>2</sup>C output of the sensor and converts it to an analog current signal and an optional digital open drain output.

The SCC1-Current sensor cable is marked with a yellow sleeve next to the M8 sensor connector and with an imprint 0-20MA 24V/xxxx on the cable, where xxxx denotes a lot code.

The cable has a total length of 5 meters.

#### 1.1 Analog Current Output (Iout)

The current output provides a current which corresponds to the measured flow rate. The flow rate is linearly mapped to the current across a user-specified range, see Figure 1, and can be calculated by the following formula:

$$Flow rate = (Iout - Imin) \cdot \frac{Flow_{atImax} - Flow_{atImin}}{Imax - Imin} + Flow_{atImin}$$

The parameters *Imax*, *Imin*, *Flow*<sub>atlmax</sub> and *Flow*<sub>atlmin</sub> can be configured by the user (see section 1.4 Configuration). They can be freely chosen within the range of the sensor's specifications.

By default, SCC1-Current is configured with 10 mA output at no-flow, 0 mA for negative maximum flow (sensor output limit), and 20 mA for positive maximum flow (sensor output limit). The default calibration field accessed by SCC1-Current can also be configured.

The sensor cable output current is capped at the current output limits  $I_{highLimit}$  and  $I_{lowLimit}$ . By default,  $I_{highLimit}$  is set to 21 mA and  $I_{lowLimit}$  is set to 0 mA. See Figure 1 below for an illustration of the different parameters.

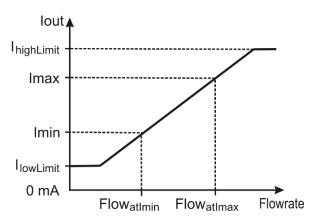


Figure 1: Scaling of the analog current output and definition of parameters.

#### Example:

The SLS-1500 has a maximum flow range (output limits) of +/-65 ml/min. If the whole flow range is to be covered by the analog current output, the parameters *Flow*<sub>atlmin</sub> and *Flow*<sub>atlmax</sub> are set to -65 ml/min and +65 ml/min, respectively, with *Imax* being 20 mA and *Imin* being 0 mA. (this is the default setting for this sensor). A measured current of 13 mA at the current output is then converted to the actual flow rate as follows:

$$\mathit{Flowrate} = (13~\text{mA} - 0~\text{mA}) \cdot \frac{65~\text{ml/min} - (-65~\text{ml/min})}{20~\text{mA} - 0~\text{mA}} + (-65~\text{ml/min}) = 19.5~\text{ml/min}$$



#### 1.2 Digital Open Drain Output

The digital output has only two logic states, high and low. Since the digital output is realized as an open drain (open collector) circuit, a pull-up resistor has to be connected between digital output and an external voltage  $V_{high}$ , which serves as the high-level voltage (see block diagram in Figure 6). The value of this high-level voltage may be chosen independently or identical to the supply voltage in order to match the logic levels of the system.

The different modes of operation for the digital output are described below. By default, the digital output is disabled, i. e. it is always low.

The mode of operation is configured using the configuration software. (See section 1.4 Configuration).

#### Flow Switch

In this mode, the digital output is low when the measured flow is outside a specified flow range, and high when inside. This flow range is specified by two threshold values. Additionally, a hysteresis may be specified for each threshold value (see Figure 2).

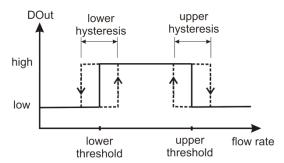


Figure 2: Flow Switch thresholds and definition of parameters.

When the flow switch mode is first enabled in the configurator, a lower threshold at 25% of the sensor's maximum flow rate with a hysteresis of +-5% of the set point is suggested and the upper threshold is set above the maximum flow rate. Setting the upper threshold above the maximum flow rate is equivalent to disabling the upper threshold altogether.

#### **Volume Counter**

In this mode, the SCC1-Current cable's internal electronics calculate the accumulated volume based on the flow rate and every time a defined volume flows through the meter, a pulse is generated on the digital output. The total amount of liquid which has flown through the meter can be determined by simply counting the pulses and multiplying by the defined volume.

The liquid volume per output pulse and the duration of the output pulse can be configured.

The volume counter can be configured to ignore negative flow rates (flow in backward direction). If negative flow rates are *not* ignored, these are subtracted from the internally calculated volume. In this case, no output pulses are generated until the internal totalizer has again reached a positive value.

In order to reset the internal totalizer, the SCC1-Current cable should be switched off for 1000 ms by interrupting the supply voltage.

When the Volume Counter is first enabled in the configurator, the suggested setting generates 0.5 ms long output pulses with a frequency of approx. 250 Hz at the maximum flow rate of the attached sensor.



#### 1.3 Output Filter

Sensirion Liquid Flow sensors have a very fast response time and therefore react very quickly to changes in the flow rate. In some application a low-pass filtering of the sensor output may be desired e.g. to ignore short excursions of the flow rate above or below the switch thresholds. For this purpose, a moving average filter is available in the SCC1-Current sensor cable. The filter is realized as moving average with a configurable time constant (2 milliseconds to 1 minute). The moving average can be applied to the analog current output, to the digital open drain output signal, to both outputs or to none of them. Figure 3, Figure 4, and Figure 5 show some examples of possible combinations and the resulting outputs on an oscillating flow rate with some interruptions of the flow. Such noisy flow rates are typical for certain pump types.

The filter time constant and signal selection (filtered/unfiltered) for each output may be configured using the configuration software. (See section 1.4 Configuration).

## Example 1: Filtered signal for the analog current output, unfiltered signal for the digital (switch) output.

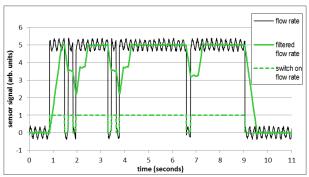


Figure 3: Cable output with moving average filter on flow rate (green solid line) and switch output on unfiltered flow rate (green dashed line). The black line shows the underlying unfiltered flow rate.

#### Example 2:

Filtered signal for both, analog current output and digital (switch output). Note the difference in the switching behavior between Figure 3 and Figure 4: In Figure 3 (unfiltered signal) the switch output follows the short dips in the flow rate immediately. In contrast, the switch output on the filtered signal (in Figure 4) is tolerant to such short excursions below the switch level.

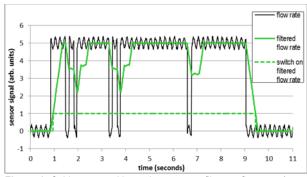


Figure 4: Cable output with moving average filter on flow rate (green solid line) and switch output on filtered flow rate (green dashed line). The black line shows the underlying unfiltered flow rate.



#### Example 3:

Unfiltered signal for the analog current output, filtered signal for the digital (switch) output. The analog current output follows the flow rate immediately, including the high-frequency oscillations of the pump and the short drops in the flow rate. On the other hand, the switch output on the filtered signal is tolerant to these short excursions below the switch threshold.

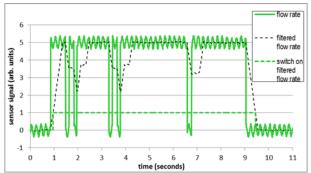


Figure 5: Cable output with unfiltered flow rate (green solid line) and switch output on filtered flow rate (green dashed line). The black dashed line shows the underlying filtered flow rate.

#### 1.4 Configuration

The output configuration settings for the SCC1-Current sensor cable are stored in the memory of the flow meter, not in the SCC1-Current sensor cable. The configuration is written to the flow meter's memory using an SCC1-USB sensor cable and the configurator software which is available on the Sensirion webpage. Once the flow meter is configured, any SCC1-Current cable can be connected to the flow meter. The internal electronics in the cable will then read the settings from the flow meter's memory and start operation on power-up.

The necessary steps are summarized below:

- 1) Connect the flow meter to a PC using the SCC1-USB sensor cable.
- Open the Analog Sensor Cable Configurator software. Write your settings. Note that the same configurator software is also used for the SCC1-Analog 0-10V voltage output cable.
- 3) Disconnect the flow meter from the SCC1-USB sensor cable and reconnect with the SCC1-Current sensor cable. The SCC1-Current sensor cable will now read the output configuration from the flow meter and continuously update the output as soon as it is powered up.



## 2 Electrical Specifications

#### 2.1 Electrical Characteristics

Default conditions of 25 °C and 24 V supply voltage apply to values in the table below, unless otherwise stated.

Parameter	Symbol	Conditions	Min	Тур.	Max	Unit	Comment
Supply voltage	$V_{DD}$		12	24	36	V	-
Power consumption	-	V <sub>DD</sub> = 24 V, I <sub>out</sub> = 20 mA, R <sub>load</sub> = 0 Ohm		650		mW	Does not include power dissipated in pull-up resistor of the digital open drain output.
Analog current output	lout	-	0		21	mA	-
Analog current output load resistor	R <sub>load</sub>	-	0		1000	Ohm	Suitable load resistor depends on supply voltage. Max. 1 kOhm for 24 V supply, 500 Ohm for 12 V supply. Load resistor ≥ 80 Ohm recommended.
Analog current output accuracy	-	I <sub>out</sub> = 0 mA		±10	±50	μΑ	Accuracy of the digital-to- analog conversion in the SCC1-Current sensor cable.
		I <sub>out</sub> = 20 mA		±20	±100	μΑ	See the flow meter's datasheet for the accuracy of the flow meter.
Analog current output resolution	-			5.2		μΑ	Nominal resolution of internal DAC.
Digital open drain output sink current	Isink				15	mA	Sink currents exceeding 30 mA may trigger the sensor cable's internal thermal fuse resistor.
Digital open drain output pull-up resistor	R <sub>pull-up</sub>	V <sub>high</sub> = 24 V	1.8	2.2		kOhm	Pull-up resistor depends on desired high-level and input characteristics of read out device.
Digital open drain output high-level voltage	V <sub>high</sub>				24	V	
Digital open drain output low-level voltage	-	R <sub>pull-up</sub> = 1.8 kOhm, V <sub>high</sub> = 24 V			600	mV	The low-level voltage depends on the high-level voltage and the value of the pull-up resistor.

Table 1: Electrical specifications



#### 2.2 Absolute Maximum Ratings

Stress levels beyond those listed in Table 2 may cause permanent damage to the device. These are stress ratings only and functional operation of the device at these conditions cannot be guaranteed. Exposure to the absolute maximum rating conditions for extended periods may affect the reliability of the device.

Parameter	Rating
Supply voltage, V <sub>DD</sub>	0 V to 40 V
Digital output high voltage, V <sub>high</sub>	0 V to 26.4 V
Operating temperature range <sup>1</sup>	-25 °C to +80 °C (fixed installation)
	-5 °C to +80 °C (moving installation)
Storage temperature range <sup>2</sup>	-40 °C to +105 °C

Table 2: Absolute maximum ratings.

#### 2.3 Wire Assignment

One side of the SCC1-Current is connected to the 4 Pin M8 connector of Sensirion's liquid flow meters. The other side has four wires: Two for power supply and one for each output (analog current and digital open drain output). The outputs should be measured as indicated in the block diagram of Figure 6 and the wire assignment is stated in Table 3.

#### WARNING!

Incorrect connection may lead to permanent damage of the cable. Check the wire assignment carefully.

Wire	Function	Symbol
Blue	Supply voltage	$V_{\text{DD}}$
White	Ground	GND
Brown	Analog current output	lout
Black	Digital open drain output	Dout

Table 3: Wire assignment.

<sup>&</sup>lt;sup>1</sup> Operating temperature of the SCC1-Current sensor cable. See the flow meter's datasheet for the operating temperature of the flow meter.

<sup>&</sup>lt;sup>2</sup> The recommended storage temperature range is 10-50°C.



#### 2.4 Connection Diagram

A load resistor  $R_{load}$  should be placed between the current output ( $l_{out}$ ) and GND. Typically, this load resistor is already incorporated into the current-loop readout device. A load resistor between 80 Ohm and 500 Ohm is typical. The voltage of the digital output ( $V_{DOut}$ ) should be measured with respect to GND, as indicated in the connection diagram of Figure 6. Make sure that the ground of the power supply is connected to the reference voltage of the readout device.

In order to use the digital open drain output, the  $D_{out}$  wire needs to be connected to the high voltage  $V_{high}$  by an external pull-up resistor  $R_{pull-up}$ . The value of the pull-up resistor has to be chosen in accordance with the input characteristics of the readout device. For a high-resistance device such as a volt meter a 10 kOhm pull-up resistor is typically suitable. On some programmable logic controllers (PLCs) the digital inputs may have a low input resistance and in such a case e.g. a 2.2 kOhm pull-up resistor should be used.

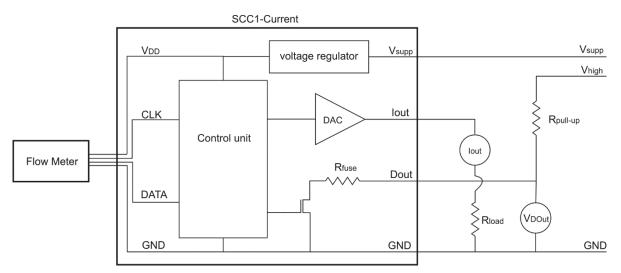


Figure 6: Internal block diagram of the SCC1-Current Sensor Cable and measurement setup.

#### 2.5 Notes on Operation

The cable is in general not short-circuit proof and does not have inverse polarity protection. Incorrectly connecting the cable may therefore cause damage to the cable.

Strong electrical interference on the short distance between the flow meter and the cable electronics may disturb the digital communication between the cable and the sensor. Such interference should therefore be avoided.

If the SCC1-Current sensor cable is operated with a low load resistance  $R_{load}$  on the analog current output the cable dissipates up to 700 mW power in the overmolded electronics. As a consequence, the cable may warm up by up to 25°C. In order to avoid heating up the flow sensor and thus adversely affecting the sensor measurement performance, the cable bulge with the electronics should not be tied to the sensor housing.



#### 3 Mechanical Specifications

#### 3.1 Dimensions

Approximate mechanical dimensions of the electronics overmold are shown in Figure 7, dimensions and specifications of the cable are listed in Table 4.

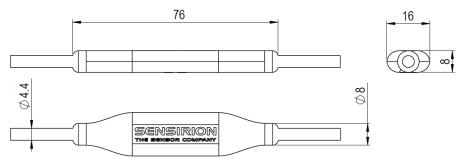


Figure 7: Mechanical dimensions of electronics overmold.

Parameter	Value
Length of cable on sensor side (including M8 connector)	~10 cm
Length of cable on pigtail end	~490 cm
Cable outer jacket diameter on pigtail end	4.4 ± 0.2 mm
Conductor cross section	0.25 mm <sup>2</sup> (24 AWG)
Outer diameter of individual wires	1.15 ± 0.05 mm
Minimum bending radius <sup>3</sup>	10x cable diameter

Table 4: Mechanical specifications

#### 3.2 Materials

Part	Material
Cable jacket	PUR
Wire insulation	PP
Connector housing	PUR
Connector screw ring	POM
Electronics overmold	Polyamide hotmelt
Color code sleeve	Polychloroprene

Table 5: List of materials

### 4 Ordering Information

Product code	Product description	Article number
SCC1-Current 5m	SCC1-Current 0-20mA Sensor Cable 5m	1-101667-01
	24V DC, M8 Sensor Connector to Pigtail	

Table 6: Ordering Information

<sup>&</sup>lt;sup>3</sup> Bending radius of the cable. Avoid excessive and repetitive bending at the transition of the cable to the overmold.



#### 5 Important Notices

#### 5.1 Warning, Personal Injury

Do not use this product as safety or emergency stop devices or in any other application where failure of the product could result in personal injury. Do not use this product for applications other than its intended and authorized use. Before installing, handling, using or servicing this product, please consult the data sheet and application notes. Failure to comply with these instructions could result in death or serious injury.

If the Buyer shall purchase or use SENSIRION products for any unintended or unauthorized application, Buyer shall defend, indemnify and hold harmless SENSIRION and its officers, employees, subsidiaries, affiliates and distributors against all claims, costs, damages and expenses, and reasonable attorney fees arising out of, directly or indirectly, any claim of personal injury or death associated with such unintended or unauthorized use, even if SENSIRION shall be allegedly negligent with respect to the design or the manufacture of the product.

#### 5.2 ESD Precautions

The inherent design of this component causes it to be sensitive to electrostatic discharge (ESD). To prevent ESD-induced damage and/or degradation, take customary and statutory ESD precautions when handling this product.

#### 5.3 Warranty

SENSIRION warrants solely to the original purchaser of this product for a period of 12 months (one year) from the date of delivery that this product shall be of the quality, material and workmanship defined in SENSIRION's published specifications of the product. Within such period, if proven to be defective, SENSIRION shall repair and/or replace this product, in SENSIRION's discretion, free of charge to the Buyer, provided that:

- notice in writing describing the defects shall be given to SENSIRION within fourteen (14) days after their appearance;
- such defects shall be found, to SENSIRION's reasonable satisfaction, to have arisen from SENSIRION's faulty design, material, or workmanship;
- the defective product shall be returned to SENSIRION's factory at the Buyer's expense; and
- the warranty period for any repaired or replaced product shall be limited to the unexpired portion of the original period.

This warranty does not apply to any equipment which has not been installed and used within the specifications recommended by SENSIRION for the intended and proper use of the equipment. EXCEPT FOR THE WARRANTIES EXPRESSLY SET FORTH HEREIN, SENSIRION MAKES NO WARRANTIES, EITHER EXPRESS OR IMPLIED, WITH RESPECT TO THE PRODUCT. ANY AND ALL WARRANTIES, INCLUDING WITHOUT LIMITATION, WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, ARE EXPRESSLY EXCLUDED AND DECLINED.

SENSIRION is only liable for defects of this product arising under the conditions of operation provided for in the data sheet and proper use of the goods. SENSIRION explicitly disclaims all warranties, express or implied, for any period during which the goods are operated or stored not in accordance with the technical specifications.

SENSIRION does not assume any liability arising out of any application or use of any product or circuit and specifically disclaims any and all liability, including without limitation consequential or incidental damages. All operating parameters, including without limitation recommended parameters, must be validated for each customer's applications by customer's technical experts. Recommended parameters can and do vary in different applications.

SENSIRION reserves the right, without further notice, (i) to change the product specifications and/or the information in this document and (ii) to improve reliability, functions and design of this product.

Copyright<sup>®</sup> 2017, by SENSIRION. CMOSens<sup>®</sup> is a trademark of Sensirion All rights reserved



#### **6 Revision History**

Date	Version	Page(s)	Changes
09. Oct 2017	1	all	Initial release

#### 7 Headquarters and Subsidiaries

Sensirion AG Laubisruetistr. 50 CH-8712 Staefa ZH Switzerland

phone: +41 44 306 40 00 fax: +41 44 306 40 30 info@sensirion.com www.sensirion.com

Sensirion Taiwan Co. Ltd phone: +886 3 5506701 info@sensirion.com www.sensirion.com Sensirion Inc., USA phone: +1 312 690 5858 info-us@sensirion.com www.sensirion.com

Sensirion Japan Co. Ltd. phone: +81 3 3444 4940 info-jp@sensirion.com www.sensirion.co.jp Sensirion Korea Co. Ltd. phone: +82 31 337 7700~3 info-kr@sensirion.com www.sensirion.co.kr

Sensirion China Co. Ltd. phone: +86 755 8252 1501 info-cn@sensirion.com www.sensirion.com.cn

To find your local representative, please visit <a href="www.sensirion.com/distributors">www.sensirion.com/distributors</a>